



**SAFEMASTER**  
**Safety Module for Safety Switches**  
**LG 5925/920**

**Translation**  
**of the original instructions**

0264113



**E. Dold & Söhne GmbH & Co. KG**  
 Bregstraße 18 • 78120 Furtwangen • Germany  
 Phone: +49 7723 654-0 • Fax +49 7723 654356  
 dold-relays@dold.com • www.dold.com

# Contents

Symbol and Notes Statement.....	11
General Notes .....	11
Designated Use .....	11
Safety Notes .....	11
Function Diagram .....	13
Block Diagram .....	13
Circuit Diagrams .....	13
Approvals and Markings .....	13
Applications .....	13
Indicators .....	13
Notes .....	13
Connection Terminals .....	14
Technical Data .....	14
Technical Data .....	14
UL-Data .....	14
Standard Type.....	15
Ordering Example .....	15
Troubleshooting .....	15
Maintenance and repairs .....	15
Characteristics.....	15
Application Examples .....	16
Connection Technology .....	25
Accessories .....	25
Dimensions (dimensions in mm) .....	26
Setting .....	26
Mounting / disassembly of the PS / PC-terminal blocks .....	26
Safety Related Data .....	27
CE-Declaration of Conformity.....	28
UK-Declaration of Conformity.....	29
Notice .....	30
Notice .....	31



Before installing, operating or maintaining this device, these instructions must be carefully read and understood.



Keep instructions for future reference



The installation must only be done by a qualified electrician!



Do not dispose of household garbage!  
The device must be disposed of in compliance with nationally applicable rules and requirements.

To help you understand and find specific text passages and notes in the operating instructions, we have important information and information marked with symbols.

### Symbol and Notes Statement



**DANGER:**  
Indicates that death or severe personal injury will result if proper precautions are not taken.



**WARNING:**  
Indicates that death or severe personal injury can result if proper precautions are not taken.



**CAUTION:**  
Indicates that a minor personal injury can result if proper precautions are not taken.



**INFO:**  
Referred information to help you make best use of the product.



**ATTENTION:**  
Warns against actions that can cause damage or malfunction of the device, the device environment or the hardware / software result.

### General Notes

The product hereby described was developed to perform safety functions as a part of a whole installation or machine. A complete safety system normally includes sensors, evaluation units, signals and logical modules for safe disconnections. The manufacturer of the installation or machine is responsible for ensuring proper functioning of the whole system. DOLD cannot guarantee all the specifications of an installation or machine that was not designed by DOLD. The total concept of the control system into which the device is integrated must be validated by the user. DOLD also takes over no liability for recommendations which are given or implied in the following description. The following description implies no modification of the general DOLD terms of delivery, warranty or liability claims.

### Designated Use

The LG 5925/920 is used to interrupt a safety circuit in a safe way. It can be used to protect people and machines in applications with safety switches, e.g. to monitor sliding gates.

When used in accordance with its intended purpose and following these operating instructions, this device presents no known residual risks. Non-observance may lead to personal injuries and damages to property.

### Safety Notes



#### **Risk of electrocution!** **Danger to life or risk of serious injuries.**

- Disconnect the system and device from the power supply and ensure they remain disconnected during electrical installation.
- The device may only be used for the applications described in the mutually applicable operating instructions / data sheet. The notes in the respective documentation must be heeded. The permissible ambient conditions must be observed.
- The contact protection of the elements connected and the insulation of the supply cables must be designed in accordance with the requirements in the operating instructions / data sheet.
- Note the VDE and local regulations, particularly those related to protective measures.



#### **Risk of fire or other thermal hazards!** **Danger to life, risk of serious injuries or property damage.**

- The device may only be used for the applications described in the mutually applicable operating instructions / data sheet. The notes in the respective documentation must be heeded. The permissible ambient conditions must be observed. In particular, the current limit curve must be heeded.
- The device may only be installed and put into operation by experts who are familiar with this technical documentation and the applicable health and safety and accident prevention regulations.



#### **Functional error!** **Danger to life, risk of serious injuries or property damage.**

- The device may only be used for the applications described in the mutually applicable operating instructions / data sheet. The notes in the respective documentation must be heeded. The permissible ambient conditions must be observed.
- The device may only be installed and put into operation by experts who are familiar with this technical documentation and the applicable health and safety and accident prevention regulations.
- The unit should be panel mounted in an enclosure rated at IP 54 or superior. Dust and dampness may lead to malfunction.



#### **Installation fault!** **Danger to life, risk of serious injuries or property damage.**

- Make sure of sufficient protection circuitry at all output contacts for capacitive and inductive loads.




#### **Attention!**


- The safety function must be triggered during commissioning.
- If a line fault occurs after the voltage has been connected to S12, S22, the unit will be activated because this line fault is similar to the normal On-function.
- Switch S1 must not be set while device is under supply voltage.
- **AUTOMATIC START !**  
According to IEC/EN 60204-1 part 9.2.5.4.2 and 10.8.3 it is not allowed to restart automatically after emergency stop. Therefore the machine control has to disable the automatic start after emergency stop.
- Opening the device or implementing unauthorized changes voids any warranty



## SAFEMASTER Safety Module for Safety Switches LG 5925/920

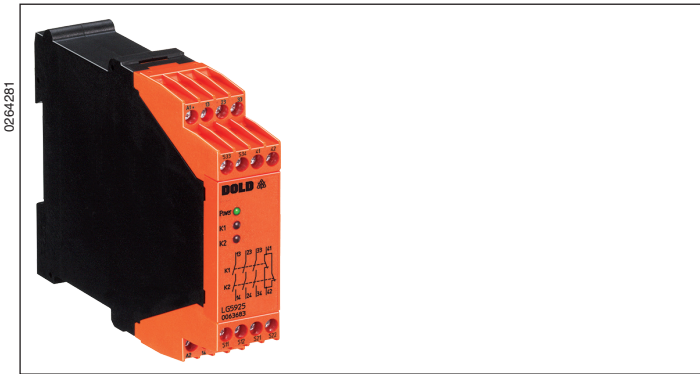

### Function Diagram

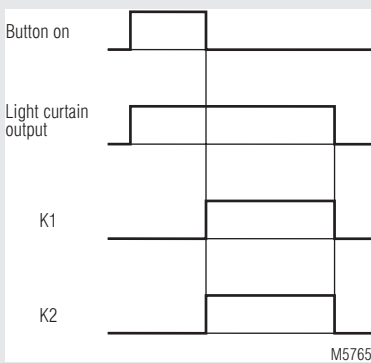

- According to
  - Performance Level (PL) e and category 4 to EN ISO 13849-1
  - SIL Claimed Level (SIL CL) 3 to IEC/EN 62061
  - Safety Integrity Level (SIL) 3 to IEC/EN 61508 and IEC/EN 61511
- According to EN 50156-2 for furnaces
- To connect:
  - Safety switch NE 5020
  - Safety switch NE 5021
- Output: Max. 4 NO contacts, see contacts
- 1- or 2-channel operation
- Line fault detection on On-button
- Manual restart or automatic restart, switch S2
- With or without cross fault monitoring switch S1
- LED indicator for channel 1, 2 and supply voltage
- Wire connection: Also 2 x 1.5 mm<sup>2</sup> stranded ferruled, or 2 x 2.5 mm<sup>2</sup> solid DIN 46228-1/-2/-3/-4
- As option with pluggable terminal blocks for easy exchange of devices
  - With screw terminals
  - Or with cage clamp terminals
- Width 22.5 mm

### Approvals and Markings



### Applications

- Protection of people and machines
- Monitoring of safety gates
- Usage in furnace application in continuous operation acc. to EN 50156-1


### Indicators

- LED Power: On when supply connected
- LED K1/K2: On when relay K1 and K2 energized


### Notes

Line fault detection on On-button:  
The line fault detection is only active when S12 and S22 are switched simultaneously. If the On-button is closed before S12, S22 is connected to voltage (also when line fault across On-Button), the output contacts will not close. A line fault across the On-button which occurred after activation of the relay, will be detected with the next activation and the output contacts will not close.


### Block Diagram

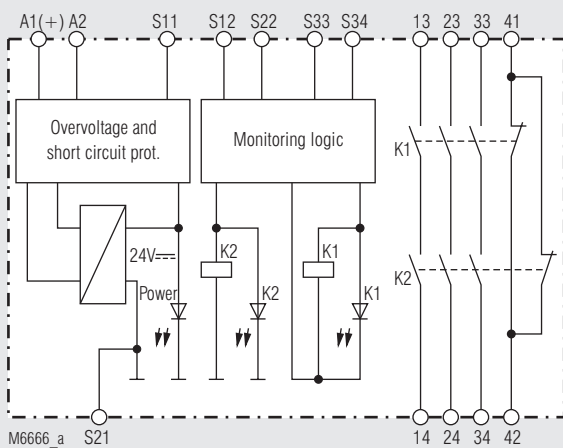


### Circuit Diagrams

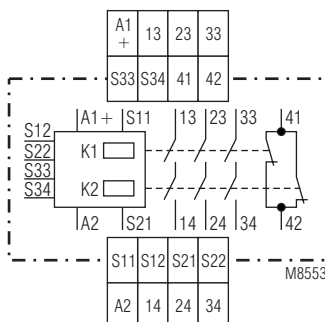

LG 5925.48/920

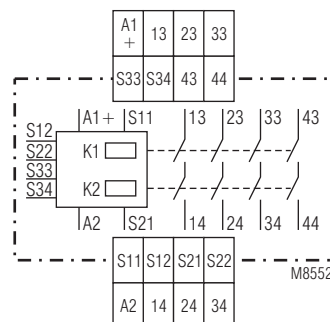

LG 5925.04/920

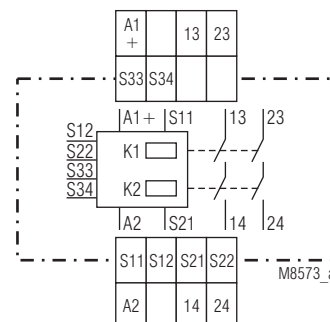

LG 5925.02/920

Connection Terminals	
Terminal designation	Signal description
A1 (+)	DC 24 V
A2	0 V
S12, S22, S34	Inputs
S11, S21, S33	Outputs
13, 14, 23, 24, 33, 34, 43, 44	Forcibly guided NO contacts for release circuit
41,42	Forcibly guided indicator output

### Technical Data

#### Input

<b>Nominal voltage <math>U_N</math>:</b>	DC 24 V
<b>Voltage range:</b>	0.9 ... 1.1 $U_N$
<b>Nominal consumption:</b>	DC approx. 1.7 W
<b>Min. Off-time:</b>	250 ms
<b>Control voltage on S11 at <math>U_N</math>:</b>	DC 22.5 V
<b>Control current (/typ.) over S12 or S22:</b>	35 mA at $U_N$
<b>Min. voltage between terminals S12, S22 when relay activated:</b>	DC 19 V
<b>Short-circuit protection:</b>	Internal PTC
<b>Overvoltage protection:</b>	Internal VDR

#### Output

<b>Contacts</b>	
LG 5925.02/920:	2 NO contacts
LG 5925.04/920:	4 NO contacts
LG 5925.48/920:	3 NO contacts, 1 NC contact

The NO contacts are safety contacts.

**The NC contacts 41-42 can only be used for monitoring**

#### Operate delay typ. at $U_N$ :

Manual start:	20 ms
Automatic start:	350 ms

#### Release delay typ. at $U_N$ :

Disconnecting the supply:	20 ms
Disconnecting S12, S22:	15 ms

#### Contact type:

<b>Nominal output voltage:</b>	AC 250 V
	DC: Lee arc limit curve

#### Thermal current $I_{th}$ :

	Max. 8 A per contact
	see quadratic total current limit curve

#### Switching capacity

to AC 15:		
NO contacts:	3 A / AC 230 V	IEC/EN 60947-5-1
NC contacts:	2 A / AC 230 V	IEC/EN 60947-5-1

to DC 13:		
NO contacts:	2 A / DC 24 V	IEC/EN 60947-5-1
NC contacts:	2 A / DC 24 V	IEC/EN 60947-5-1

to DC 13:		
NO contact:	4 A / DC 24 V at 0.1 Hz	
NC contact:	4 A / DC 24 V at 0.1 Hz	

#### Electrical life

at 5 A, AC 230 V $\cos \varphi = 1$ :	> 2.2 x 10 <sup>5</sup> switching cycles
---------------------------------------	--

#### Permissible operating frequency:

	Max. 1200 switching cycles / h
--	--------------------------------

#### Short circuit strength

max. fuse rating:	10 A gG / gL	IEC/EN 60947-5-1
Line circuit breaker:	B 6 A	

#### Mechanical life:

	> 20 x 10 <sup>6</sup> switching cycles
--	---

### Technical Data

#### General Data

<b>Operating mode:</b>	Continuous operation
<b>Temperature range</b>	
Operation:	- 25 ... + 60 °C (see quadratic total current limit curve) At an altitude of > 2000 m the maximum permissible temperature reduces by 0.5 °C / 100 m
Storage :	- 40 ... + 85 °C

#### Altitude, Clearance and creepage distances

Rated impuls voltage / pollution degree:	IEC 60 664-1
	≤ 2000 m > 2000 m up to ≤ 4000 m
	4 kV / 2 2.5 kV / 2

#### EMC

Interference suppression:	EN 61326-3-1, EN 61000-6-7
Limit value class B	EN 55011

#### Degree of protection

Housing:	IP 40	IEC/EN 60529
Terminals:	IP 20	IEC/EN 60529

#### Housing:

	Thermoplastic with V0 behaviour according to UL subject 94
<b>Vibration resistance:</b>	Amplitude 0.35 mm IEC/EN 60068-2-6 frequency 10 ... 55 Hz

<b>Climate resistance:</b>	25 / 060 / 04 IEC/EN 60068-1
----------------------------	------------------------------

#### Terminal designation:

<b>Wire fixing:</b>	EN 50005
---------------------	----------

	Plus-minus terminal screws M 3.5 box terminals with wire protection or cage clamp terminals
<b>Mounting:</b>	DIN rail IEC/EN 60715
<b>Weight:</b>	220 g

#### Dimensions

#### Width x height x depth:

LG 5925/920:	22.5 x 90 x 121 mm
LG 5925/920 PC:	22.5 x 111 x 121 mm
LG 5925/920 PS:	22.5 x 104 x 121 mm

#### UL-Data

**The safety functions were not evaluated by UL. Listing is accomplished according to requirements of Standard UL 508, "general use applications"**

<b>Nominal voltage <math>U_N</math>:</b>	DC 24 V
<b>Ambient temperature:</b>	- 25 ... + 55 °C
<b>Altitude:</b>	≤ 2000 m

#### Switching capacity

<b>LG 5925.04/920</b>	
Ambient temperature 35 °C:	Pilot duty B300 8A 250Vac Resistive 8A 24Vdc Resistive or G.P.
Ambient temperature 55 °C:	Pilot duty B300 4A 250Vac Resistive 4A 24Vdc Resistive or G.P.

#### LG 5925.02/920, LG 5925.48/920

Ambient temperature 45 °C:	Pilot duty B300 8A 250Vac Resistive 8A 24Vdc Resistive or G.P.
Ambient temperature 55 °C:	Pilot duty B300 6A 250Vac Resistive 6A 24Vdc Resistive or G.P.

<b>Wire connection:</b>	60 °C / 75 °C copper conductors only
Screw terminals fixed:	AWG 20 - 12 Sol/Str Torque 0.8 Nm
Plug in screw:	AWG 20 - 14 Sol Torque 0.8 Nm AWG 20 - 16 Str Torque 0.8 Nm AWG 20 - 12 Sol/Str
Plug in cage clamp:	



**Technical data that is not stated in the UL-Data, can be found in the technical data section.**

### Standard Type

LG 5925.48/920/61 DC 24 V

Article number:

0063683


• Output: 3 NO contacts, 1 NC contact

• Nominal voltage  $U_N$ : DC 24 V

• Width: 22.5 mm

### Ordering Example

LG 5925 . . . . . /920 /61 DC 24 V

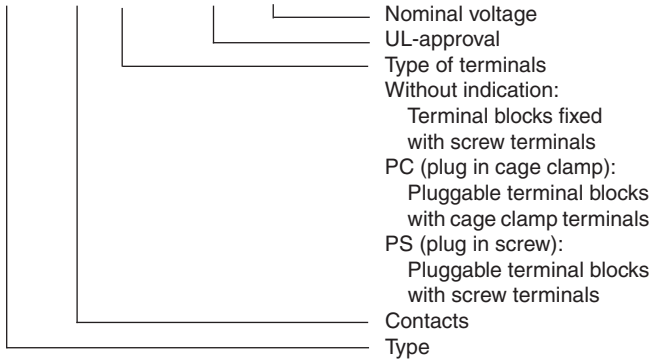


### Troubleshooting

Failure	Potential cause
LED "Power" does not light up	- Power supply not connected
LED "K1" lights up, but "K2" remains off	- Safety relay K1 is welded (replace device) - A 1-channel switch-off occurred on S12 (switch channel off on S22)
LED "K2" lights up, but "K1" remains off	- Safety relay K2 is welded (replace device) - A 1-channel switch-off occurred on S22 (switch channel off on S12)
Device cannot be activated	- Safety relay K2 is welded (replace device) - Incorrect setting of switch S2 - Manual start mode: Line fault on start-button (disconnect power supply and remove fault) - Automatic start mode: S33-S34 not bridged


### Maintenance and repairs

- The device contains no parts that require maintenance.
- In case of failure, do not open the device but send it to manufacturer for repair.

### Characteristics

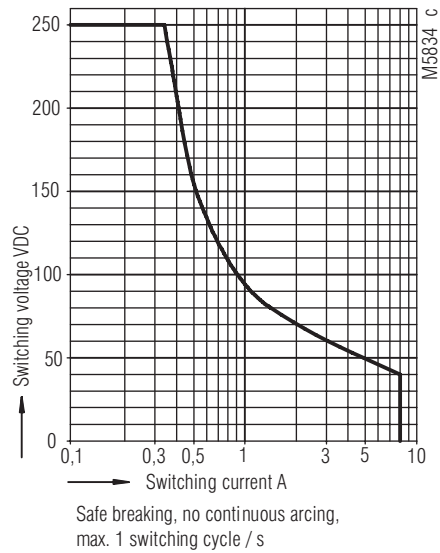

Arc limit curve under resistive load

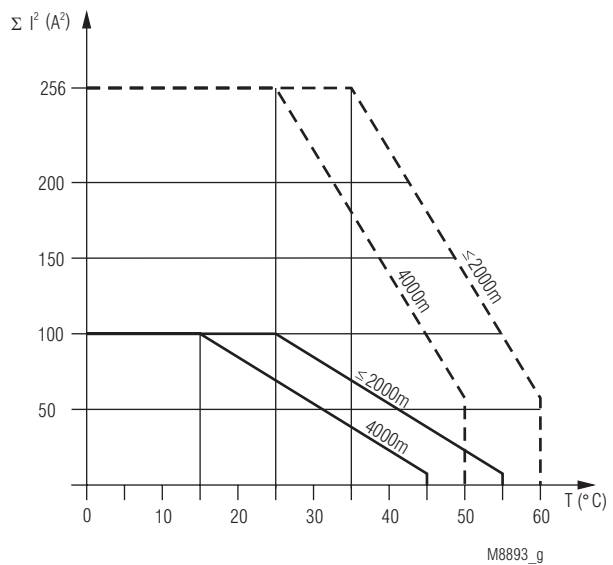

--- Device mounted away from heat generation components.  
Max. current at 60°C (≤2000m) or 50°C (4000m) over 4 contact path =  $3,8A \hat{=} 4 \times 3,8^2 A^2 = 58A^2$

— Device mounted without distance heated by devices with same load.  
Max. current at 55°C (≤2000m) or 45°C (4000m) over 4 contact path =  $1A \hat{=} 4 \times 1^2 A^2 = 4A^2$

$$\Sigma I^2 = I_1^2 + I_2^2 + I_3^2 + I_4^2$$








$I_1, I_2, I_3, I_4$  - Current in contact paths

### Quadratic total current limit curve


From an altitude of > 2000 m the curve is adjusted by -0.5 °C / 100 m (see example for 4000 m)



DE	<b>Anschlussstechnik</b>
EN	<b>Connection Technology</b>
FR	<b>Technologie de connexion</b>

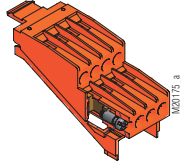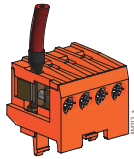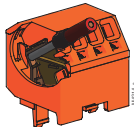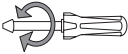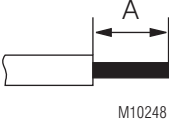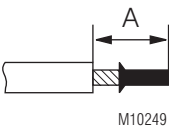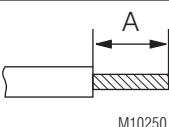	Schraubklemmen, nicht abnehmbar Screw terminals, fixed Bornes à vis, fixes	Schraubklemmen, abnehmbar Screw terminals, pluggable Bornes à vis, amovibles	Federkraftklemmen, abnehmbar Cage clamp terminals, pluggable Bornes ressorts, amovibles	
		 PS	 PC	
	ø 4 mm / PZ 1 0,8 Nm 7 LB. IN	ø 4 mm / PZ 1 0,8 Nm 7 LB. IN	DIN 5264-A; 0,5 x 3	
 M10248	A = 8 mm 1 x 0,5 ... 4 mm <sup>2</sup> 1 x AWG 20 to 12 2 x 0,5 ... 2,5 mm <sup>2</sup> 2 x AWG 20 to 14	A = 8 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14 2 x 0,5 ... 1,5 mm <sup>2</sup> 2 x AWG 20 to 16	A = 10 ... 12 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14	A = 12 mm 1 x 0,5 ... 4 mm <sup>2</sup> 1 x AWG 20 to 12
 M10249	A = 8 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14 2 x 0,5 ... 1,5 mm <sup>2</sup> 2 x AWG 20 to 16	A = 8 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14 2 x 0,5 ... 1 mm <sup>2</sup> 2 x AWG 20 to 18	A = 10 ... 12 mm 1 x 0,5 ... 1,5 mm <sup>2</sup> 1 x AWG 20 to 16	A = 12 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14
 M10250	A = 8 mm 1 x 0,5 ... 4 mm <sup>2</sup> 1 x AWG 20 to 12 2 x 0,5 ... 2,5 mm <sup>2</sup> 2 x AWG 20 to 14	A = 8 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14 2 x 0,5 ... 1,5 mm <sup>2</sup> 2 x AWG 20 to 16	A = 10 ... 12 mm 1 x 0,5 ... 2,5 mm <sup>2</sup> 1 x AWG 20 to 14	A = 12 mm 1 x 0,5 ... 4 mm <sup>2</sup> 1 x AWG 20 to 12

DE	<b>Zubehör</b>
EN	<b>Accessories</b>
FR	<b>Accessoires</b>



**NE 5020.92**

Artikelnummer:  
Article number:  
Référence:  
0051641

DE	Magnetschalter codiert, für DC 24 V, mit 2 Halbleiterausgängen
EN	Safety switch, magnetic coded, for DC 24 V, with 2 semiconductor outputs
FR	Interrupteur magnétique codé, pour DC 24 V, avec 2 sorties à semi-conducteurs




**NE 5021.02**

Artikelnummer:  
Article number:  
Référence:  
0054695

DE	Magnetschalter codiert, mit 2 Schließern (Reedkontakten)
EN	Safety switch, magnetic coded, with 2 NO contacts (reed contacts)
FR	Interrupteur magnétique codé, avec 2 contacts NO (contacts Reed)


DE	Maßbild (Maße in mm)
EN	Dimensions (dimensions in mm)
FR	Dimensions (dimensions en mm)

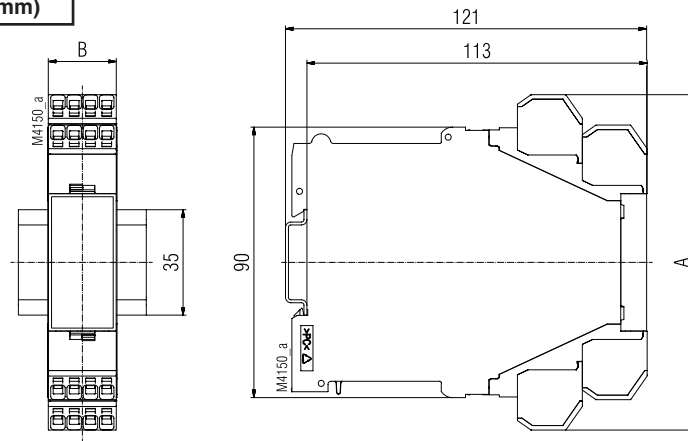




	A	B
LG 5925/900	90	22,5
LG 5925/900 PS	104	22,5
LG 5925/900 PC	111	22,5

DE	Geräteprogrammierung
EN	Setting
FR	Programmation de l'appareil

DE	Montage / Demontage der PS / PC-Klemmenblöcke
EN	Mounting / disassembly of the PS / PC-terminal blocks
FR	Montage / Démontage des borniers PS / PC

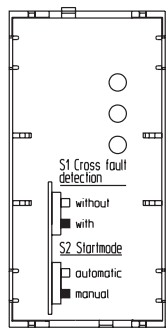

M8892

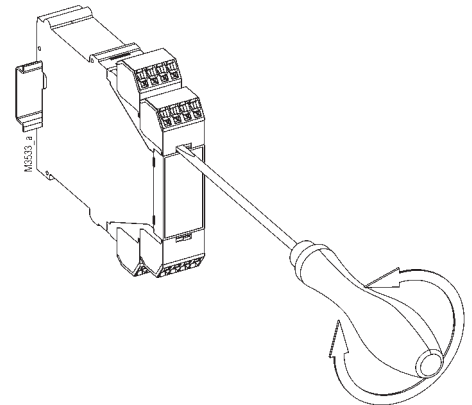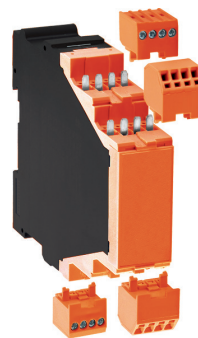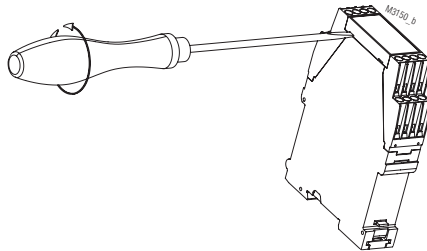

DE	S1 darf nur bei unbestromtem Gerät betätigt werden! Die Schalterstellung zeigt den Lieferzustand.
EN	Disconnect unit before setting of S1 Drawing shows setting at the state of delivery
FR	Commutation de S1 uniquement hors tension. Appareil livré tel que sur le schéma.

DE	<b>Demontage der steckbaren Klemmenblöcke (Stecker)</b> <ol style="list-style-type: none"> <li>Gerät spannungsfrei schalten.</li> <li>Schraubendreher in die frontseitige Aussparung zwischen Stecker und Frontplatte hineinschieben.</li> <li>Schraubendreher um seine Längsachse drehen.</li> <li>Beachten Sie bitte, dass die Klemmenblöcke nur auf dem zugehörigen Steckplatz montiert werden.</li> </ol>
EN	<b>Removing the terminal blocks with cage clamp terminals</b> <ol style="list-style-type: none"> <li>The unit has to be disconnected.</li> <li>Insert a screwdriver in the side recess of the front plate.</li> <li>Turn the screwdriver to the right and left.</li> <li>Please note that the terminal blocks have to be mounted on the belonging plug in terminations.</li> </ol>
FR	<b>Démontage des borniers amovibles</b> <ol style="list-style-type: none"> <li>Mise hors tension de l'appareil</li> <li>Enfoncer un tourne-vis dans la fente entre la face avant et le bornier</li> <li>Tourner le tourne-vis pour libérer le bornier</li> <li>Tenir compte du fait que les borniers ne doivent être montés qu'à leur place appropriée</li> </ol>

DE	<b>Sicherheitstechnische Kenndaten</b>
EN	<b>Safety Related Data</b>
FR	<b>Données techniques sécuritaires</b>

<b>EN ISO 13849-1:</b>		
Kategorie / Category:	4	
PL:	e	
MTTF <sub>d</sub> :	216,7	a (year)
DC <sub>avg</sub> :	99,0	%
d <sub>op</sub> :	365	d/a (days/year)
h <sub>op</sub> :	24	h/d (hours/day)
t <sub>cycle</sub> :	3600	s/cycle
	≥ 1	/h (hour)

<b>IEC/EN 62061 IEC/EN 61508 IEC/EN 61511:</b>		
SIL CL:	3	IEC/EN 62061
SIL	3	IEC/EN 61508, IEC/EN 61511
HFT <sup>1)</sup> :	1	
DC:	99,0	%
PFH <sub>D</sub> :	1,1E-10	h <sup>-1</sup>
PFD <sub>AVG</sub> :	8,2E-05	(Low Demand Mode)
T <sub>1</sub> :	20	a (year)
<sup>1)</sup> HFT = Hardware-Fehlertoleranz Hardware failure tolerance Tolérance défauts Hardware		

Anforderung seitens der Sicherheitsfunktion an das Gerät im High Demand Mode Demand to our device based on the evaluated necessary safety level of the application at High Demand Mode Consigne résultant de la fonction sécuritaire de l'appareil au High Demande Mode	Intervall für zyklische Überprüfung der Sicherheitsfunktion  Intervall for cyclic test of the safety function  Interval du contrôle cyclique de la fonction sécuritaire					
	nach, acc. to, selon EN ISO 13849-1	<table border="1"> <tr> <td>PL e with Cat. 3 or Cat. 4</td> <td>einmal pro Monat once per month mensuel</td> </tr> <tr> <td>PL d with Cat. 3</td> <td>einmal pro Jahr once per year annuel</td> </tr> </table>	PL e with Cat. 3 or Cat. 4	einmal pro Monat once per month mensuel	PL d with Cat. 3	einmal pro Jahr once per year annuel
PL e with Cat. 3 or Cat. 4	einmal pro Monat once per month mensuel					
PL d with Cat. 3	einmal pro Jahr once per year annuel					
nach, acc. to, selon IEC/EN 62061, IEC/EN 61508	<table border="1"> <tr> <td>SIL CL 3, SIL 3 with HFT = 1</td> <td>einmal pro Monat once per month mensuel</td> </tr> <tr> <td>SIL CL 2, SIL 2 with HFT = 1</td> <td>einmal pro Jahr once per year annuel</td> </tr> </table>		SIL CL 3, SIL 3 with HFT = 1	einmal pro Monat once per month mensuel	SIL CL 2, SIL 2 with HFT = 1	einmal pro Jahr once per year annuel
	SIL CL 3, SIL 3 with HFT = 1	einmal pro Monat once per month mensuel				
SIL CL 2, SIL 2 with HFT = 1	einmal pro Jahr once per year annuel					



DE	<p>Die angeführten Kenndaten gelten für die Standardtype. Sicherheitstechnische Kenndaten für andere Geräteausführungen erhalten Sie auf Anfrage.</p> <p>Die sicherheitstechnischen Kenndaten der kompletten Anlage müssen vom Anwender bestimmt werden.</p>
EN	<p>The values stated above are valid for the standard type. Safety data for other variants are available on request.</p> <p>The safety relevant data of the complete system has to be determined by the manufacturer of the system.</p>
FR	<p>Les valeurs données sont valables pour les produits standards. Les valeurs techniques sécuritaires pour d'autres produits spéciaux sont disponibles sur simple demande.</p> <p>Les données techniques sécuritaires de l'installation complète doivent être définies par l'utilisateur.</p>

DE	EG-Konformitätserklärung
EN	CE-Declaration of Conformity
FR	Déclaration de conformité européenne

EG - Konformitätserklärung  
Declaration of Conformity  
Déclaration de conformité européenne



**Hersteller:** E. Dold & Söhne GmbH & Co. KG  
*Manufacturer: / Fabricant:*  
**Anschrift:** Bregstraße 18  
*Address: / Adresse:* 78120 Furtwangen  
Germany

<b>Produktbezeichnung:</b>	Not-Aus-Modul	LG5925.kkccc	mit:	kk = 02, 03, 04, 48, 54
<i>Product description:</i>	<i>Emergency-stop-module</i>	LG5925.kkttccc	<i>with:</i>	kk = 02, 04, 48 (für / for / pour /900, /920 )
<i>Désignation du produit:</i>	<i>Module arrêt d'urgence</i>	LG5925.kktt/900ccc	<i>avec:</i>	tt = PS, PC
		LG5925.kk/920ccc		optional ccc = /60 .. /69

Das bezeichnete Produkt stimmt mit den Vorschriften folgender europäischer Richtlinien überein:  
The indicated product is in conformance with the regulations of the following european directives:  
Le produit désigné est conforme aux instructions des directives européennes:

<b>Maschinenrichtlinie:</b>	2006/42/EG	EU-Abl. L157/24, 09.06.2006
<i>Machinery directive: / Directives Machines:</i>		
<b>EMV - Richtlinie:</b>	2014/30/EU	EU-Abl. L96/79, 29.03.2014
<i>EMC - Directive: / Directives- CEM::</i>		
<b>RoHS - Richtlinie</b>	2011/65/EU	EU-Abl. L174/88, 01.07.2011
<i>RoHS -Directive: / Directives - RoHS:</i>		

<b>Prüfgrundsätze:</b>	EN ISO 13849-1:2015	EN 50178:1997
<i>Basis of Testing:</i>	EN 62061:2015 + A1:2013 + A2:2015	EN 61508 Parts 1-7:2010
<i>Lignes de contrôle:</i>	EN 50156-2:2015	
	EN 61000-6-1:2007	EN 61000-6-2:2005 + AC:2005
	EN 61000-6-3:2007 + A1:2011 + AC:2012	EN 61000-6-4:2007 + A1:2011
	EN 61326-3-1:2017	EN 55011:2009 + A1:2010
	EN 60947-5-1:2005 + A1:2009	

Die Übereinstimmung eines Baumusters des bezeichneten Produktes mit der oben genannten Maschinenrichtlinie wurde bescheinigt durch:

Consistency of a production sample with the marked product in accordance to the above machiney directive has been certified by:  
La conformité d'un échantillon du produit désigné aux directives machines susmentionnées a été certifiée par:

<b>Benannte Stelle:</b>	TÜV Rheinland Industrie Service GmbH
<i>Certification office: / l'organisme notifié:</i>	Am Grauen Stein, 51105 Köln
<b>Nummer der benannten Stelle:</b>	0035
<i>Number of certification office: / Numéro de l'organisme notifié:</i>	
<b>Nummer der Bescheinigung:</b>	01/205/5197.03/21
<i>Certification number: / Numéro de certificat:</i>	
<b>Ausstellungsdatum :</b>	24.03.2021
<i>Date of issue: / Date de délivrance:</i>	

**Für die Zusammenstellung der technischen Unterlagen ist bevollmächtigt:**

*For the compilation of technical documents is authorized:  
Pour la composition des documents techniques est autorisé:*

Gamal Hagar, Entwicklungsleiter / R&D Manager

**Rechtsverbindliche Unterschrift:**

*Signature of authorized person:  
Signature du PDG :*

Christian Dold, Produktmanagment

**Ort, Datum :** Furtwangen, 10.06.2021  
*Place, Date: / Lieu, date:*

Diese Original - Erklärung bescheinigt die Übereinstimmung mit den genannten Richtlinien, beinhaltet jedoch keine Zusicherung von Eigenschaften. Die Sicherheitshinweise der Produktdokumentation sind zu beachten.

This original declaration confirms the conformity of the mentioned directives but does not comprise any guarantee of the product characteristics. The safety directives of the product documentation are to be considered.

Cette déclaration originale certifie la conformité des directives nommées mais ne comprend aucune garantie des caractéristiques du produit. Les directives de sécurité de la documentation du produit sont à considérer.

DE	UK-Konformitätserklärung
EN	UK-Declaration of Conformity
FR	Déclaration de conformité UK

## UK Declaration of Conformity



**Manufacturer:** E. Dold & Söhne GmbH & Co. KG

**Address:** Bregstraße 18  
78120 Furtwangen  
Germany

**Product description:** Emergency Stop Module

**LG5925.kkccc** mit: kk = 02, 03, 04, 48, 54  
**LG5925.kkttccc** kk = 02, 04, 48 (für / for / pour  
**LG5925.kk/900ccc** /900, /920)  
**LG5925.kktt/900ccc** tt = PS, PC  
**LG5925.kk/920ccc** optional ccc = /60 .. /69

The indicated product is in conformance with the regulations of the following British regulations:

**Supply of Machinery (Safety) Regulations:** S.I. 2008 No. 1597

**Electromagnetic Compatibility Regulations:** S.I. 2016 No. 1091

**RoHS Regulations:** S.I. 2012 No. 3032

**Designated standards:**

EN ISO 13849-1:2015	EN 50178:1997
EN 62061:2005 + AC:2010 + A1:2013 + A2:2015	EN 61508 Parts 1-7:2010
EN 50156-2:2015	
EN 61000-6-1:2007	EN 61000-6-2:2005
EN 61000-6-3:2007 + A1:2011	EN 61000-6-4:2007 + A1:2011
EN 61000-6-7:2015	EN 55011:2016 + A1:2017
EN 61326-1:2013	EN 61326-3-1:2017

Consistency of a production sample with the marked product in accordance to the above machinery directive has been certified by:

**Certification office:** TÜV Rheinland UK Ltd., Friars Gate(Third Floor),  
1011 Stratford Road, Shirley, Solihull B90 4BN, United Kingdom  
2571

**Number of certification office:**

**Certification number:** 01/205U/5107.00/22

**Date of issue:** 2022-07-28

**For the compilation of technical documents is authorized:** **Signature of authorized person:**

Dold Industries Ltd  
11 Hamberts Rd. Blackall Ind. Estate  
South Woodham Ferrers  
GB - Essex, CM3 5UW

*ppa C. Dold*  
.....  
Christian Dold - Productmanagement  
**Place, Date :** Furtwangen, 2022-08-23

This original declaration confirms the conformity of the mentioned directives but does not comprise any guarantee of the product characteristics. The safety directives of the product documentation are to be considered.



DE	<b>Notizen</b>
EN	<b>Notice</b>
FR	<b>Note</b>

DE	Notizen
EN	Notice
FR	Note

